

# User guide



# Table of Contents

<b>Overview .....</b>	<b>6</b>
<b>Getting Started .....</b>	<b>7</b>
Device Overview .....	7
Assemble Your Device .....	9
Charging the Battery .....	10
<b>Set up Your Device .....</b>	<b>11</b>
Turn Your Device ON/OFF .....	11
Initial Setup .....	11
Secure Your Device .....	11
Set Up Account on Your Device .....	12
<b>Know Your Device .....</b>	<b>13</b>
Home Screen .....	13
Previewing the Home Screen .....	14
Customizing the Home Screen .....	14
Widgets .....	15
App Shortcuts .....	16
Folders .....	16
Status Bar .....	17
Touchscreen Gestures .....	19
Notification Panel .....	20
Using the On-screen Keyboard .....	20
User Dictionary .....	21
Editing Text .....	22
Selecting Text .....	23
Glide Typing .....	23
Google Voice Typing .....	24
Screen Timeout/Sleep Mode ON .....	24
Adjusting Volume .....	25
Connecting Your Phone to the Computer .....	25
<b>Contacts .....</b>	<b>27</b>
Create a Contact .....	27
Edit a Contact .....	27
Share a Contact .....	27
Delete a Contact .....	28

Favorites .....	28
<b>Phone Calls .....</b>	<b>29</b>
Making Calls.....	29
Answering Calls.....	30
Making an International Call.....	31
Making a Video Call.....	31
Using In-Call Options.....	32
Manage Calls.....	33
Voicemail.....	35
<b>Messaging .....</b>	<b>36</b>
Sending a Message.....	36
Replying/Forwarding a Message.....	36
Deleting a Message/Thread.....	36
Message Settings.....	37
Sending a Multimedia Message (MMS) .....	37
<b>Email .....</b>	<b>38</b>
Adding an Account .....	38
Removing an Account.....	38
Composing an Email.....	38
Responding to an Email.....	39
Working with Multiple Email Messages.....	40
Switching Between Google Accounts.....	40
Labeling an Email .....	41
Email Settings .....	41
Google Apps .....	42
<b>Maps.....</b>	<b>43</b>
Opening and Viewing Maps.....	43
<b>Camera .....</b>	<b>46</b>
Capturing a Photo .....	46
Recording a Video.....	47
Camera Settings .....	48
ProMode .....	49
<b>Calendar.....</b>	<b>51</b>
Creating an Event.....	51
Editing/Deleting an Event.....	51
Sharing an Event.....	51

Calendar Settings.....	51
<b>Clock.....</b>	<b>52</b>
Set an Alarm .....	52
<b>Photos .....</b>	<b>53</b>
Sharing Albums, Photos, or Videos .....	53
Deleting Albums, Photos, or Videos.....	53
Editing Photos.....	53
<b>Getting Connected.....</b>	<b>54</b>
Wi-Fi.....	54
Bluetooth .....	55
USB Cable .....	56
<b>Chrome.....</b>	<b>57</b>
Opening Chrome .....	57
Accessing or Searching the Webpage .....	57
Using Browser Options.....	57
Downloading Files.....	58
Using Bookmarks .....	59
Chrome Settings.....	59
<b>Settings .....</b>	<b>60</b>
Network & internet.....	60
Connected devices.....	64
Apps.....	65
Notifications.....	65
Battery .....	68
Storage.....	68
Sound .....	69
Display.....	70
Wallpaper.....	71
Accessibility .....	71
Security .....	73
Privacy.....	75
Location .....	76
Safety & emergency.....	78
Passwords & accounts .....	78
Digital Wellbeing & Parental Controls.....	79
Google.....	80

System .....	81
System updates .....	83
About Phone .....	84
COVID-19 Exposure Notifications .....	85
<b>Product Specifications .....</b>	<b>86</b>
<b>Safety Hazards.....</b>	<b>87</b>
FCC Statement.....	87
FCC SAR Warning.....	88
HAC Statement .....	89
<b>Battery Use .....</b>	<b>90</b>
<b>Troubleshooting.....</b>	<b>91</b>

# Overview

Thank you for purchasing the Orbic Joy (RC608L).

 
This manual provides information about the hardware and software features of your Orbic Joy.

We recommend you read the Product Safety and Warranty Information booklet that you have received along with your device for additional safety information.

# Getting Started

This guide helps you learn about your device hardware, assembly procedures, and how to get started using your device.

## Device Overview

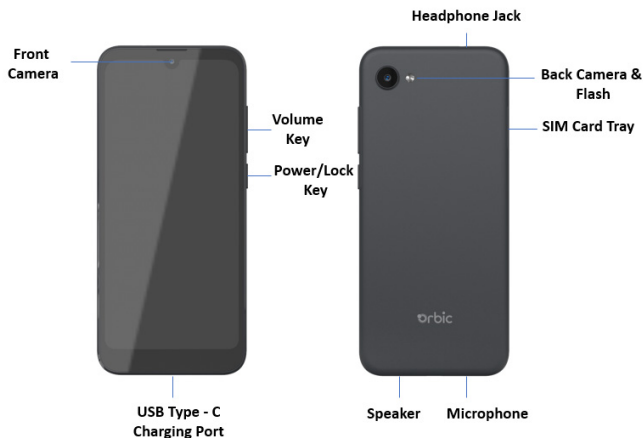

<b>Keys</b>	<b>Description</b>
Headphone Jack	To insert the headphones.
Front Camera	To take pictures and videos of yourself.
Volume Key	To adjust the volume of your device's sound and audio playback.
Power/Lock Button	To turn the device ON/OFF.
Back Camera & Flash	To take pictures and videos. Light up subjects in low-light environments when taking pictures or recording video.
SIM Card Tray	To insert SIM/microSD card.
USB Type-C Charging Port	To charge the mobile.
Speaker	To listen to the music or ringtone.
Microphone	To record audio and detect voice commands



## Assemble Your Device

It is necessary to install the SIM card and memory card and charge the battery before use.

 
Your device uses a nano SIM card. A SIM card may be preinstalled or may be able to use your previous SIM card.

### Replacing the SIM Card/microSD Card

Your device comes with a pre-installed SIM card.

If you wish to change or remove the SIM card or install a microSD, power OFF the device and follow the below steps:

1. Insert the SIM pin tool into the SIM pinhole on the tray to open the tray.
2. Insert the microSD card with the gold contacts facing down and close the tray.

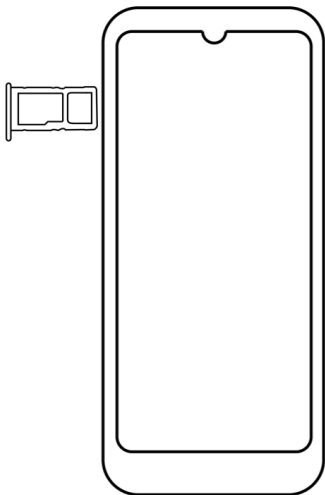


# Charging the Battery

Your device is powered by a rechargeable battery.

**Warning!** Use only approved charging devices and batteries. Using other accessories may void your warranty and may damage your device.

 1. Plug the USB cable into the USB power adapter.
2. Plug the power adapter into a standard outlet.
3. Plug the other end of the USB cable into the phone's micro USB port.
4. The USB icon on the cable should always face up when connecting the cable to your device, as shown.

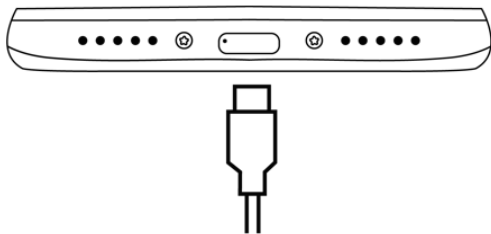

## NOTE:

- Charge your device's battery with the device turned OFF to maximize efficiency.
- Over time, battery life decreases steadily.
- Do not charge the battery for longer than eight hours.

# Set up Your Device

## Turn Your Device ON/OFF

The instructions below explain how to turn your device ON or OFF.

### To Turn the Device ON

- Press and hold the **Power/Lock** key until the device turns ON.

**NOTE:** The first time you use your phone, you'll need to set it up.

### To Turn the Device OFF

- If the display is off, press **Power/Lock** to turn it back on.
- Press and hold **Power/Lock** for a few seconds.
- When the phone options menu appears, tap **Power OFF**.
- Tap **OK**.

## Initial Setup

The first time you turn your device ON (or after a reset to factory settings), the on-screen prompts guide you through the basics of setting up your device.

Follow the prompts to choose a default language, set up accounts, choose location services, learn about your device's features, and more.

## Secure Your Device

Use your device's screen lock features to secure your device. To choose more screen lock options, see [Screen lock](#).

- To lock the device, press the **Power** key.
- To unlock the device, press the **Power** key and swipe up to unlock.

# Set Up Account on Your Device

## Google™ Account

Your new device uses your Google account to fully utilize its Android features, including Gmail, and the Google Play Store. When you turn on your device for the first time, set up a connection with your existing Google account, or create a new Google account.

To create a Google account, or set up your Google account on your device, see [Passwords & accounts](#).

 
- From Home screen, tap **Settings > Passwords & accounts > Add account > Google**.

Google™, Google Play, and Android™ are trademarks of Google™ LLC.

# Know Your Device

## Home Screen


The Home screen serves as the start of your experience.

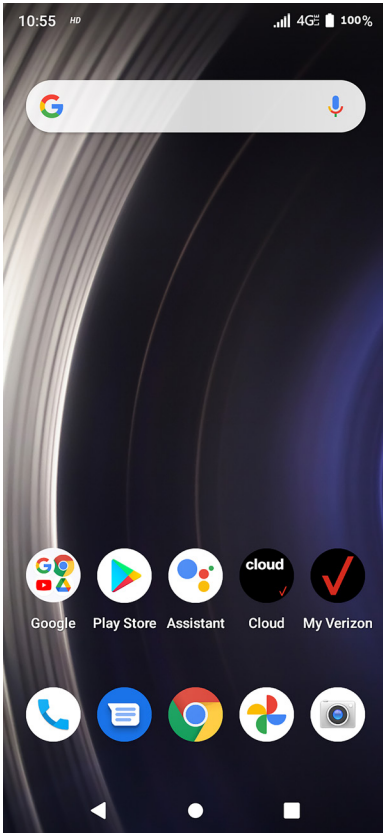

The Home screen is displayed when the device is in idle mode.

The Home screen allows you to add shortcuts, folders, and widgets to your favorite apps to be easily accessible.

### **To access the Home screen**

- Tap  to return to the center of the Home screen.

## **Previewing the Home Screen**

From the Home screen, tap and hold the desired application. The application moves to your selected home screen once you choose it.

## **Customizing the Home Screen**

You can customize the home screen and the display wallpaper.

### **Moving an Item on the Home Screen**

#### **To move/drag an item on the home screen**

1. Open the Home screen you want to customize.
2. Tap and hold the item you want to move until it vibrates.
3. Drag the item to a new location on your Home screen.
4. Point your finger at the location where you want the item.

**NOTE:** To add shortcuts to a Home screen, swipe up from your app list to reveal all your applications. Next, find the app you wish to add, tap and hold on the item, and drag it onto the Home screen.

### **Removing an Item from the Home Screen**

#### **To remove an item from the home screen**

1. From the Home screen, tap and hold an item until it vibrates.
2. Drag the item to **X Remove** to remove the item.

## Changing the Wallpaper of the Home Screen

1. From the Home screen, tap and hold any empty area on the Home screen for a few seconds.
2. Tap **Wallpapers**. Choose a photo from your camera gallery or memory card.
3. Tap **Set Wallpaper**.

## Widgets

Widgets are extensions for applications that appear on the Home screen. Widgets include links to a specific contact, Internet bookmarks, Gmail and email accounts, and many more.

### Add a Widget to a Home Screen

1. Touch and hold any empty area on the Home screen > select **Widgets**.
2. Touch and hold the required widget, drag it to the Home screen and release it.

### Remove a Widget

1. Touch and hold the widget you want to remove from the Home screen.
2. Drag the widget to **X Remove** and release it.

**NOTE:** By removing a widget, you are not deleting it but rather removing it from the Home screen.

# App Shortcuts

You can add a shortcut to the Home screen.

## Adding an App Shortcut

1. Touch and hold any preloaded or downloaded app on the device screen.
2. Drag the app to the Home screen and release it.

## Removing the Shortcut

1. Touch and hold the app shortcut you want to remove from the Home screen.
2. Drag the app shortcut to **X Remove** and release it.

# Folders

Use folders to organize items on your Home screen.














 
## Creating/Removing a Folder








1. Drag one application over another to create a folder.
2. You can name a folder and drag other applications into it after it is created.
3. You can move folders in the same way that you move applications.
4. To remove a folder, touch and hold the folder that you want to remove, drag the folder to **X Remove** and release it.



# Status Bar

The Status Bar at the top of the home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.

<b>Status Icons</b>	
	Signal Strength
	No Signal
	Network Connected
	Wi-Fi Signal Strength
	Airplane Mode
	Bluetooth ON
	Speaker ON
	Silent Mode
	Microphone Muted
	Remaining Battery
	Vibrate Mode
<b>Notification Icons</b>	
	Call in Progress
	Missed Call
	Alarm Set

	New Voicemail
	New Gmail
	Data Downloading
	Download Completed
	New Message
	MicroSD Card Status
	Wi-Fi Call

# Touchscreen Gestures

<b>Tap</b>	You can select on-screen items such as application icons or settings buttons by touching them with your finger.
<b>Tap and Hold</b>	Touch and hold your finger over the item to open its options.
<b>Swipe or Slide</b>	Drag your finger horizontally or vertically across the screen.
<b>Drag</b>	Tap and hold your finger before you begin to drag and hold your finger down until the item reaches your desired location.
<b>Flick</b>	<p>Swiping the screen is similar to flicking, but you need to swipe it with lighter and quicker strokes instead.</p> <p>Finger gestures are always vertical. For example, flicking through contacts or messages.</p>
<b>Rotate</b>	You can change the orientation of most screens from portrait to landscape simply by turning the phone sideways. Turning the phone sideways will bring up a larger on-screen keyboard.

# Notification Panel

A notification icon displays calendar events, device status, and other information on the Status Bar.

## Viewing and Responding to Notifications

1. Tap and hold the Status bar, and slide your finger downward to open the Notifications panel.
2. If you have multiple notifications, you may have to scroll to see them all.
3. Tap the desired notification to respond.
4. To close the notification panel, drag the bottom bar of the panel or tap ◀ to navigate to the previous screen.

## Using the On-screen Keyboard

Type your text input using the onboard keyboard. The keyboard opens automatically in some applications. For others, tap anywhere in a text field to launch the keyboard.



1. Tap each letter on the on-screen keypad.
2. Tap and hold a letter for additional key options (not all keys have additional options). Additional key options include numbers and letters with accent marks. If options are available, you will see a box with all the options shown. Slide your finger to select the character you want.
3. You may continue until the word is complete.

**NOTE:** You can select input methods when typing in the notification panel.



# User Dictionary

The predictive text dictionary may require the addition of a word, for example, a name or a technical term.

## Adding a Word Manually

4. From the Home screen, swipe up to reveal all your **Apps** > tap **Settings** .
5. Scroll down and tap the **System icon**.
6. Tap **Language & input**.
7. Tap **Personal Dictionary** and tap the **plus sign** + .
8. Type the new word > Enter the shortcut key, if required > tap  to save the word.

## Editing/Deleting a Word

9. From the Home screen, swipe up to reveal all your **Apps** > tap **Settings** .
10. Scroll down and tap the **System**.
11. Tap **Language & input** > **Personal dictionary**.
12. Choose the word you wish to delete.
13. Tap  to delete the word.

# Editing Text

You can select, copy or cut the text you've entered, then paste it in another text field within the user interface.

**NOTE:** Some applications may offer different text editing methods.

## Select the Text

1. Tap the text field.
2. Move the cursor to the beginning or end of the desired text by tapping in the location you want the cursor.
3. Tap and hold the text field.
4. Tap **Select word** in the pop-up menu or tap **Select all** to select all the text in the text field.
5. Drag your finger to move the text cursor to the letter within the text that you want to select. The selected text is highlighted in orange.

## Cut/Copy the Text

1. Double-click to select the text to cut or copy it.
2. Tap and hold the selected text.
3. Tap **Cut** or **Copy** in the menu that opens.
4. If you tap **Cut**, the selected text is removed from the text field. In this case, the text is saved to the clipboard so you can paste it into another text field.

## Paste the Text

1. Cut or copy the text to paste.
2. Tap the text field where you want to paste the text and move the cursor to your desired location.
  - You can paste text that you copied from one application into the text field in any other application.

3. Tap and hold > select **Paste** in the pop-up menu.
  - The text is inserted after the cursor. The text remains in the clipboard so that you can paste that exact text into another location.

## Selecting Text

You can select, copy or cut the text you've entered, then paste it in another text field within the user interface.

**NOTE:** Some applications may offer different text editing methods.



### To select a text

1. Tap the text field.
2. Move the cursor to the beginning or end of the desired text by tapping in the location you want the cursor.
3. Tap and hold the text field.
4. Tap **Select word** in the pop-up menu or tap **Select all** to select all the text in the text field.
5. Drag your finger to move the text cursor to the letter within the text that you want to select.

## Glide Typing

The Google Keyboard lets you slide your finger across the letters to spell the word.



### To enable glide typing

1. Touch and hold the comma (,) > tap  > **Glide typing**.
2. Tap  to **Enable glide typing ON/OFF**. Slide your finger from letter to letter to spell a word.
3. Do not lift your finger until you have completed spelling a word.

# Google Voice Typing

Google voice typing uses Google voice recognition to convert speech to text.

## To use Google voice typing to enter text

1. Tap  on the keyboard.  
-or-
2. Touch and hold the **Keyboard settings**  on the keyboard, and enable tap **Google voice typing**.

# Screen Timeout/Sleep Mode ON

Sleep mode saves battery power by turning off your display. You will still receive messages and calls when the display is turned off.

## Switching to Screen timeout mode

3. Press **Power/Lock** to switch your phone to Screen timeout mode.
4. Your phone automatically turns OFF the display after a period of inactivity.

## To customize the screen timeout settings

- From the Home screen, swipe up to reveal all your **Apps** > **Settings** > **Display** > **Screen timeout**.

## Waking up from Screen timeout mode

1. Your phone automatically wakes up when you have an incoming call.
2. To wake it up manually, press **Power/Lock** and the screen must be unlocked.



## Adjusting Volume

Ringtone and Media volume is independent of each other and adjusted separately.

### Adjusting the Ringer Volume

From the Home screen, press **Volume up** or **Volume down** on the right side of the phone to:

- Adjust the ringer volume to your desired level.
- While in the lowest ringer volume level, press **Volume Down** once to set your phone to **Silent mode**.
- While in the Silent, press **Volume Up** once to switch to **ringtone mode**.

### Adjusting the Media Volume

While playing music, watching a video or using preloaded or downloaded games or applications, press **Volume Up** or **Volume Down** on the right side of the phone to adjust the media volume.

### Adjusting the Earpiece Volume for Phone Calls

- During a phone call, press **Volume Up** or **Volume Down**.

## Connecting Your Phone to the Computer

You can copy your music, photos, and other files to the microSD card of your phone.

**NOTE:** This option is available only when a microSD card is inserted into the slot of your phone. While your phone is connected to a computer, USB Mass storage mode prevents you from using applications that access the memory card.


1. Connect your phone to your computer using the supplied USB cable.
2. Open the Notifications panel > tap **othe USB options**.

3. The connected phone is recognized as a removable hard drive on your computer.
4. Navigate to the removable drive and open it.
5. Choose one of the following:
  - Copy the files from the computer to the microSD card's root folder.
  - Copy the files from the phone's microSD card to a folder in your computer.
6. After copying the files, unmount the removable drive (that is, your phone) as required by your computer's operating system to remove your phone safely.
7. After unmounting the removable drive, you can disconnect the phone from the computer.


# Contacts

You can store and manage your contacts. You can synchronize with personal accounts added to your device. Accounts may also support email, calendars, and other features.

## To access Contacts


- From the Home screen, swipe up to reveal all **Apps** > tap **Contacts** .

## Create a Contact

1. Launch **Contacts** > tap  to create a new contact.
2. Enter the details for the contact.
3. Tap **Save**.


## Edit a Contact

When editing a contact, you can tap a field and change or delete information, or you can add more fields to the contact's list of information.

1. Launch **Contact** > tap a contact.
2. Tap  to edit the contact.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.

## Share a Contact



You can share a contact with others by using various sharing methods.

1. Launch **Contacts** > tap a contact to share.
2. Tap  > **Share**.
3. Tap either **Name** or **Phone number** or both.

4. Tap **Continue**.
5. Choose a sharing method and follow the prompts..



## Delete a Contact

You can delete a single contact or multiple contacts.

1. Launch **Contacts**.
  - You can touch and hold a contact > tap  to delete and confirm when prompted.  
-or-
  - Tap the contact > tap  > **Delete** and confirm when prompted.

## Favorites

When you mark contacts as favorites, they are grouped at the top of your contact list and easily accessible from other apps.









1. Launch **Contacts** > tap a contact.
2. Tap  to mark the contact as a favorite.
  - To remove the contact from Favorites, tap  .

# Phone Calls





## Making Calls

The simplest way to make a call is to dial the number directly. You can also call numbers listed in your Call log or Contacts list.

### Making a call from the dialer screen




1. From the Home screen, tap  or swipe up to reveal all your **Apps** > tap .
2. Tap the **Keypad**  > and then the number you want to dial.
  - If you make a mistake, tap  to erase a single character. Tap and hold  to erase the entire string.
3. Tap 
  - The Calling screen displays and  appears in the Status bar while the call is active.
  - To change the volume during a call, press **Volume Up / Volume Down**.
4. Tap  to end the call.

### Making a call from the Contacts

1. From the Home screen, tap  **Phone** > **Contacts**  Or swipe up to reveal all your **Apps** > **Contacts** .
2. Scroll through the contact list.
  - To find a specific contact, you can search by tapping  **Search**. Enter the name of the contact you're searching for. As you type, contacts with matching names appear below the search box. Or you can use the tab on the right side of the screen to scroll through the alphabetical contacts.
3. Tap the contact you want to call.

## Making a call from Recents


All incoming, outgoing, and missed calls are recorded in the Call log.

1. From the Home screen, tap  >  **Recents**.
2. Tap  to the right of the entry.
  - If you want to edit a number before calling, tap and hold the desired entry, and then tap **Edit number before the call**.

## Answering Calls



When you receive a phone call, the screen displays the caller's name, phone number, and caller ID icon (if stored in Contacts). When you receive a phone call from a phone number not stored in your Contacts, only the default caller ID icon and phone number are shown.

### To answer or decline an incoming call




1. On the incoming call screen, tap **ANSWER** to answer the call.
2. Tap **DECLINE** to reject the call.
  - If you were already on a call, the first call is placed on hold while answering the new call.
  - To silence the ringer before answering the call, press either of the volume keys.
3. Tap  to end the call.

**NOTE:** The caller you reject is sent directly to your voicemail box to leave a message.

## Making an International Call

1. From the Home screen, tap  **Phone**.
2. Tap and hold **0** until the international prefix '+' appears.
3. Tap the country code, area code, and phone number.
4. Tap  to dial the number.

## Making a Video Call

1. From the Home screen, tap  .
2. Enter the number and tap  to place a video call.  
-or-
3. From the Home screen, tap > **Recents**.
4. Select the number and tap  to place a video call.

**NOTE:** Not all devices support video calling. The receiver has the option to accept the video call or answer the call as a regular voice call.

## Using In-Call Options

When a call is in progress, the following options are available:

<b>Keypad</b>	Tap <b>Keypad</b> to enter different numbers during your call.
<b>Mute</b>	You can unmute the microphone by tapping the <b>Mute</b> icon again.
<b>Audio</b>	<p>You can turn the speakerphone off by tapping the <b>Speaker</b> icon again.</p> <p>The speaker turns OFF automatically when your current call ends.</p>
<b>Add call</b>	Tap <b>Add call</b> to put the current phone call on hold and add another person to the phone call.
<b>Bluetooth</b>	<p>When a Bluetooth device is paired and connected to your phone, you can conduct all calls using Bluetooth for hands-free conversation. When using a Bluetooth headset during a call, the current call screen has a blue border, and the Ongoing Call icon turns blue in the Status bar.</p> <p>Tap the <b>Bluetooth</b> icon to toggle in-call audio to and from the Bluetooth accessory.</p>

**NOTE:** To avoid damaging your hearing, do not hold the phone up to your ear when the speakerphone is ON.





# Manage Calls



Your calls are recorded in a call log. You can set up speed dials, block numbers, and use voicemail.

## Call Log





The numbers of the calls you have dialed, received, or missed are stored in the Call log.

- From the Home screen, tap  >  **Recents**. A list of recent calls is displayed. If the caller is in your Contacts list, the caller's name is displayed.

## Save a Contact from Recents



1. From the Home screen, tap  >  **Recents**.
2. Tap the desired entry > **Add to a contact**.
3. In the list of contacts that opens, tap **Create new contact** or add the phone number to the existing contact.
4. Tap **Done**.

## Clear the Call log

1. From the Home screen, tap  >  **Recents**.
2. Tap  > **Call history** >  > **Clear call history** > **OK**.
  - To remove just one entry from the Recents menu, touch and hold the entry > tap **Delete** > **OK** to confirm the deletion.



## Block a Number

By adding a caller to your Block list, future calls from this number are sent directly to your voicemail, and messages are not received.

1. From the Home screen, tap  >  **Recents**.
2. Tap the caller you want to add to the Block list.
3. Tap **Block number** and confirm when prompted.


## Speed Dial

You can assign a shortcut number to a contact for speed dialing their default number.

1. From , tap **keypad**.
2. Touch and hold a number. The speed dial numbers screen displays the reserved speed dial numbers.  
**NOTE:** Number **1** is reserved for Voicemail.
3. Type a phone number or tap  to assign a contact to the selected number. The selected contact is displayed in the Speed dial number box.

## Make a call with speed dial




You can make a call using Speed dial.

1. From the Home screen, tap  **Phone**.
2. Touch and hold the speed dial number.



## Emergency Calls

Your phone supports international emergency numbers such as 911. Emergency calling is supported anywhere the phone has a network signal.

## Making an emergency call

1. From the Home screen, tap .
2. Enter the emergency number (911).
3. Tap  to dial the number.
4. Tap  to end the call.


## Making an emergency call while the phone is locked

1. When your phone has no service status, the **Emergency call** button is displayed on the lock screen.
2. Tap **Emergency call**.
3. Enter the emergency number (911).
4. Tap  to dial the number.
5. Tap  to end the call.



# Voicemail

## Listening to Your Voicemail

The voicemail application is displayed only when phone calls are available.

When you have a new voicemail message,  appears in the Status bar.

## Calling your voicemail from the keypad

- From the Home screen, tap .
- Tap your phone number and  to dial the number.



## Calling your voicemail from the Notification panel

- Open the Notifications panel and tap **New voicemail**.

 

# Messaging

Use the Message app to send and receive SMS and MMS.


## To access message

- From the Home screen, tap  to open the message screen.
- Tap an existing message thread to open a conversation.
- Tap  to search for a message using keywords.


## Sending a Message

1. On the message screen, tap  to compose a new message.
2. Tap the field to add recipients.
3. Type your message in the text message field.
4. Tap  to send the SMS.


## Replying/Forwarding a Message

1. On the message screen, tap the message you want to reply to or forward.
2. Edit the message if required.
3. Tap  to send.

## Deleting a Message/Thread


 


1. Touch and hold the message or thread you want to delete on the message screen.
2. Tap  to delete the conversation.
3. Tap **Delete** to confirm the prompt.

## Message Settings

1. On the message screen, tap  to view the settings list. Modify the settings based on your preferences.

## Sending a Multimedia Message (MMS)



To compose a multimedia message, start by creating a new text and adding an attachment.

1. From the Home screen, swipe up to reveal all your **Apps** > tap  to open messages.
2. Tap  .
3. Enter the phone number in the **To** field or select recipients from the contact list.
4. Type your message in the text message field.
5. Tap  to add an attachment. Choose the type of attachment.
  - GIFs
  - Stickers
  - Videos -Select a video.
  - Files.
  - Location
  - Contacts
  - Schedule send
6. Tap  to send MMS.

# Email

Use the Email app to view and manage your email accounts. You can add multiple email accounts to your Orbic device.

## To access the email account

- Tap **Home key**  > swipe up for **Apps** > **Settings**  > **Passwords & accounts**.

## Adding an Account



1. Tap **Passwords & accounts** > **+ Add account**.
2. Tap the type of account you wish to add.
3. Enter the email address and password.
4. Follow the prompts to set up your email account.



**NOTE:** It may be necessary to ask your system administrator or IT support for some information.

## Removing an Account





1. Tap **Passwords & accounts** and select the account that you want to remove.
2. Tap **REMOVE ACCOUNT**.
3. Confirm the prompt to remove the account or **Cancel** to retain the account.

## Composing an Email

1. From the **Home screen** > tap **Google** > **Gmail** .
2. Tap  to compose a new email.
3. Tap the **To** field to add an email address manually.

4. If entering the recipients manually, enter additional recipients by separating each with a semicolon (;).
5. Enter the subject for the email and compose the message.
  - Tap  to insert an attachment (Files, Images, Audio, and much more), if required.
6. Review your message and tap  to **send** the composed email.

## Responding to an Email

1. From the Home screen, tap **Google** > sign into **Gmail** with the **email address** and **password**.
2. Select the email from your inbox to read.
  - Tap  to reply to the sender.
  - Tap  > **Reply to all** to send a reply to all the senders in the list.
  - Tap  > **Forward** to forward the email to another person.
3. Compose your message and tap  to send.

## Working with Multiple Email Messages



You can archive, delete or label groups of email messages at the same time.

1. From the Home screen, Swipe up to reveal all your **Apps** > find and tap on **Gmail**.
2. From any message list, select the bubble with a letter next to the email messages you want to work. The bubble will now be selected checkmark.
3. Tap **Archive** to move messages out of your inbox without deleting them.
4. Tap **Delete** to delete selected messages.
5. Tap **Labels** > select the labels you want to assign > tap **OK**.

## Switching Between Google Accounts



If you have set up two or more Google Accounts on your phone, you can switch between them in **Gmail**.

Gmail displays only one Google Account at a time. The current account is shown at the top right of any message list.



1. From the Home screen, swipe up to reveal all your **Apps** > tap **Gmail**  .
2. From any message list, tap  > **Accounts**.
3. Tap the account that you want to view. You can also tap the account name at the top of the screen to see a list of your accounts.



## Labeling an Email

1. From the Home screen, Swipe up to reveal all your **Apps** > tap **Gmail** .
2. When reading a **message**, tap  > **Change labels**.
3. Select a label > tap **OK**.


## Viewing emails by label

1. From the Home screen, Swipe up to reveal all your **Apps** > tap **Gmail** .
2. From any message list, tap  > tap a label to view matching email messages.

## Email Settings

These settings allow you to customize your email settings.








 


**NOTE:** You can use these settings for all your email accounts.

1. From the Home screen > tap **Google** > **Gmail**.
2. Tap  > **Settings** > **General settings**.
3. Customize the settings based on your preferences.

# Google Apps

Enjoy the below apps from Google™.

**NOTE:** Certain apps require you to sign into your Google account.


	<b>Chrome</b> - Use Chrome to browse the Internet.
	<b>Drive</b> - Store files on Google™ Drive with up to 15GB of free storage
	<b>Gmail</b> - Send and receive email
	<b>Google</b> - Search to get all the required information
	<b>Maps</b> - Find your current location and get location-based information
	<b>Photos</b> - Manage photos on your device
	<b>Google Play Movies and TV</b> - Watch movies and TV shows purchased from Google Play. You can stream them instantly or download them for viewing when you are not connected to the Internet.
	<b>Play Store</b> - Find and download new apps, games, music, TV shows, and more.
	<b>YouTube</b> - View and upload video from your device.
	<b>YT Music</b> - Play music and audio files on your device

# Maps

Use Maps to find your current location and get directions. You can search for addresses, landmarks, and businesses directly on a street map or satellite image.




**NOTE:** You need an active mobile data or Wi-Fi connection to use Maps.

## To access Maps

- From the Home screen, swipe up to reveal all **Apps** > tap **Maps**  .

**NOTE:** You must turn ON the location services to view your location and get directions.

## To turn ON the location services

- From the Home screen, swipe up to reveal all **Apps** > tap **Settings**  > **Location**  .
- Tap  to enable the **Use location** option. Maps may not be available for all locations.


# Opening and Viewing Maps

## Viewing location details

1. Launch **Maps**.
2. The Maps display your location and point north for your reference.
3. Swipe to any direction on the screen to use the maps.
4. While viewing a map, tap and hold a location, starred place, or a search result on the map. A balloon appears over the location with summary information.
5. Tap the balloon to see the address or more information.



## Viewing a location in Street view

Street view mode provides a street-level view of the location. Street view may not be available for all areas.

1. Launch **Maps** > tap  > tap **Street View**  under **Map details**.
2. Swipe the screen in any direction to view surrounding areas.


## Searching for a location

You can search Google Maps for specific locations, company names, or business types.


1. Launch **Maps** > tap **Search**.
2. Enter the search criteria. As you type, suggested matches from your contacts, the web, and previously searched items are displayed.
  - Tap  to search
  - Tap a suggested search term.
3. The search results are displayed as  with letter labels on the map.
  - Tap markers and titles to view more information.

## Viewing map layers

The first thing you see on Google Maps is a street map. You can view additional map layers, such as satellite images and traffic information. You can also view custom web-created Google Maps.

1. Launch **Maps** > tap  .
2. Under **Map Type**, you can select any of the options:
  - **Default:** To view a simple road map.
  - **Satellite:** To view satellite images of a specific area.
  - **Terrain:** To view the landscape and vegetation.
3. Under **Map Details**, you can select any of the options:
  - Public transit
  - Traffic
  - Bicycling
  - Street View

## Getting directions


4. Launch **Maps** > tap  for directions.
5. Use your current location as the starting point or enter a location in the **Choose start location** field.
6. Enter your destination in the **Choose destination** field.
7. Choose your desired method of transportation.





# Camera

Use the Camera app to take pictures and record videos.

 
## To access camera

- From the Home screen > tap  .



## Capturing a Photo


1. Tap  to access the camera.
2. Aim the camera at the subject using the device's main display screen as a viewfinder.
3. Pinch the screen to zoom in or pinch open to zoom out.
4. Before taking a picture, you can tap on the screen icons to access various camera options and settings.
5. Tap  to click a photo. You can also use the volume keys to click a picture.

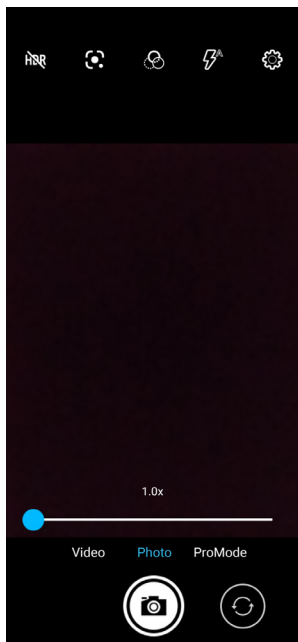**WARNING!** Use the flash from a safe distance. Keep the flash away from people and animals' eyes.




## Recording a Video

 1. From the Home screen tap .
2. Tap **Video** on the screen to switch to the video mode.
3. Aim the camera at the subject using the device's main display screen as a viewfinder.
4. Pinch the screen to zoom in or pinch open to zoom out.
5. Tap  to start recording the video.

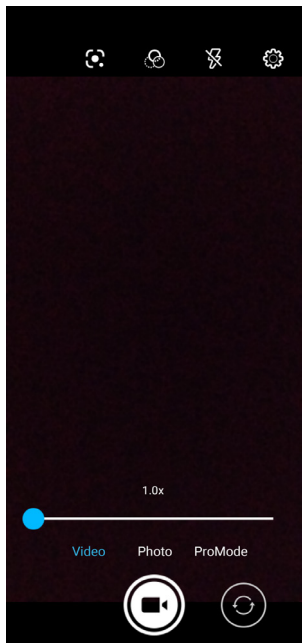

## Camera Settings

Before capturing a picture or video, you can adjust the camera settings to suit your preferences.

1. From the Home screen > tap  > **Settings** on the top right corner of the screen.
2. Customize the settings based on your preferences.



# ProMode

 
Using Pro mode, you can edit your photos and videos exactly the way you want.

You can manually adjust ISO, shutter speed, and exposure levels, add filters and adjust the white balance settings to accommodate different lighting conditions.

## To access ProMode

1. Launch **Camera** > tap **ProMode** on the screen.
2. Tap on the available Camera settings and adjust them to suit your preferences.
  - **Exposure** - The Exposure compensation is easy to identify because of its + and – symbols. Even if you have set the exposure to where you want it to, this setting can tweak to a little lighter or darker. Manual modes will often do this automatically, but it is a setting you can adjust yourself.
  - **Aperture & Shutter Speed** - You can adjust the shutter speed. A slow shutter speed lets in more light, resulting in brighter photos or videos. Fast shutter speeds allow less light to enter. This is ideal for capturing photos or videos of fast-moving subjects.
  - **White Balance** - The white balance adjusts the color temperature. The blue end of the spectrum is the cold end. Orange, or warm, is on the other end of the spectrum. This can be adjusted while taking a photo to make it look more realistic.

- **ISO** - An ISO value determines the camera's sensitivity to light. Poorly lit or fast-moving subjects benefit from high values. It is ideal to use low values for brightly lit or stationary subjects.
- **Zoom** - To make the image on the screen grow larger.

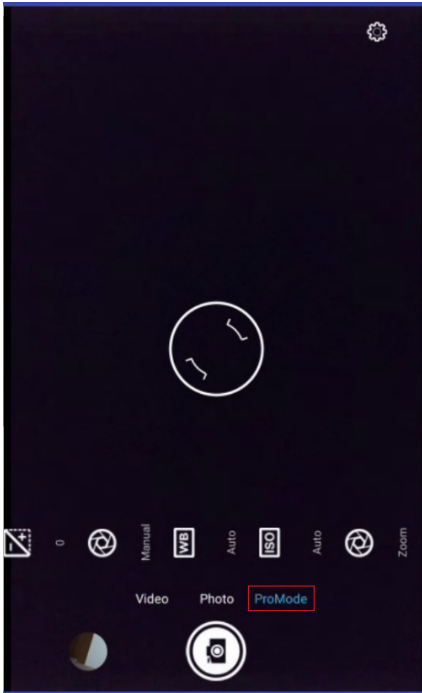


# Calendar

Use the calendar app to manage your tasks and events.

## To access calendar

- Tap the **Home key**  > swipe up for **Apps** > **Calendar**  .

## Creating an Event

1. Launch **Calendar** > tap  to add a new event.
2. Enter the details for the event.
3. Tap **Save**.

## Editing/Deleting an Event



1. Launch **Calendar** > tap the event you want to edit/delete.
2. Tap **Edit** to modify the event details > tap **Save**.  
-or-
3. Tap **Delete** to delete the selected event.

## Sharing an Event

1. Launch **Calendar** > select the event you want to share.
2. Tap **Share** > select the sharing method and follow the prompts.

## Calendar Settings



These settings help you to modify the calendar settings.

 
1. Launch **Calendar** > tap  on the upper left of the screen.
2. Scroll down and tap  **Settings**.
3. Customize the calendar based on your preferences.

# Clock



Use the Clock app to keep track of time and set the alarm.

## To access the clock

1. Tap the **Home key**  > swipe up for **Apps** > **Clock** .
2. Select the desired options:



## Set an Alarm

1. Launch **Clock** > tap  **Alarm** to set a new alarm.
2. Tap  to create a new alarm.
3. Select the time > tap **OK**.
4. **Add label** > choose the days to use the alarm > alarm tone > choose the times to repeat.

 
# Photos

Use the Photos app to view, edit, and manage photos and videos.


## To access Photos

- From the Home screen > tap **Photos** .


## Sharing Albums, Photos, or Videos

1. Tap an album, photo, or video to view it.
2. Tap  to send to others or share them via social network services.

## Deleting Albums, Photos, or Videos

1. Tap and hold an album, picture, or video to select it.
2. Select the items you want to delete.
3. Tap  > select **Remove to Trash**.

## Editing Photos

1. Tap the photo to view it on full screen.
2. Tap  to view the editing options.
3. Select from the list of the available options to edit the selected photo.

# Getting Connected




The instructions below describe connecting your device through Wi-Fi, Bluetooth, and a USB cable.

## Wi-Fi

Wi-Fi refers to certain types of Wireless Local Area Networks (WLAN), and Communication via Wi-Fi requires an access point.



### Turn Wi-Fi ON

Turning on Wi-Fi will make your device discover and connect to wireless access points within the range.



1. Touch the **Home key**  > swipe up for **Apps** > **Settings**  > **Network & internet** > **Wi-Fi**.
2. Tap  to turn Wi-Fi ON/OFF.
3. Once the Wi-Fi is ON, you will see a list of available Wi-Fi networks.
4. Tap a network to connect. The network you choose will ask for a password if it is secure.
5. Tap **CONNECT**.

### Adding a Wi-Fi Network

You can manually add a Wi-Fi network if it does not appear in the list of available networks.

1. Touch the **Home key**  > swipe up for **Apps** > **Settings**  > **Network & internet** > **Wi-Fi**.
2. Make sure the Wi-Fi is ON.
3. Tap **+ Add network**. Enter the network SSID and other required network information.
4. Tap **SAVE**.

## Forgetting a Wi-Fi network





1. Touch the **Home key**  > swipe up for **Apps** > **Settings**  > **Network & internet** > **Wi-Fi**.
2. Tap the desired network and tap **FORGET**.

## Bluetooth

Bluetooth, or short-range communications, allows you to wirelessly connect your device to several Bluetooth devices that are compatible with your devices, such as headsets, computers, printers, and wireless devices that are Bluetooth-enabled.




**NOTE:** The Bluetooth communication range is approximately 30 feet.

### Turn Bluetooth ON/OFF

1. Touch the **Home key**  > swipe up for **Apps** > **Settings**  > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Tap  **Use Bluetooth** to turn the Bluetooth ON/OFF.
  - Once the Bluetooth is ON, the  will appear in the status bar.



### Pair Bluetooth Devices

Bluetooth pairing allows you to establish trusted connections between your device and another Bluetooth device.

1. Touch the **Home key**  > swipe up for **Apps** > **Settings**  > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Tap  to turn the Bluetooth ON/OFF. Your device will scan and display the names of all available Bluetooth devices in the area.
3. Tap the name of the device you want to pair with.



**NOTE:** The Bluetooth passkey, if required, may be fixed for some devices. Try 0000 or 1234, or refer to the instructions that came with the device.

## Forgetting a Bluetooth Device

1. Touch the **Home key**  > swipe up for **Apps** > **Settings**  > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Tap  next to the paired device and tap **FORGET**.

## USB Cable

Your device is bundled with a USB cable that is used to connect your device to a computer and share files such as music, photos, and other data.


1. Connect your device and computer via a USB cable.
2. Tap **Home key**  > swipe up for **Apps** > **Settings**  > **Connected devices** > **USB**.
3. Select one of the following options:
  - File Transfer
  - USB tethering
  - MIDI
  - PTP
  - No data transfer
  - Firmware update



# Chrome


Search for information or browse web pages using the Chrome web browser. You must have an active data or Wi-Fi connection to access the internet.

## Opening Chrome

1. From the Home screen, swipe up to reveal all your **Apps** > tap **Chrome** .



  - When you open the browser, the default homepage is displayed. The most recently viewed webpage is displayed if you have used the browser recently.





## Accessing or Searching the Webpage

1. Launch **Chrome**.
2. Tap the URL field on the top of the screen.
3. Enter the URL of a webpage or search term and tap .

  - As you type, suggestions for web pages and keywords will appear on the screen. Tap a suggestion to go directly to that webpage or view search results.

## Using Browser Options

1. Stopping page loading
  - When the webpage is loading, tap **X** in the URL field to stop it from loading.
2. Reload the current page
  - Tap  >  to reload the page.

3. Finding the text on the current page
  - While viewing any web page, tap  >  **Find in page** to find a particular word on the page.
4. Sharing a webpage
  - While viewing any web pages, tap  >  **Share** to share the opened web page.
  - Select an application to send the URL. The application opens with the URL you have entered.

## Downloading Files



You can download images, files, and applications from web pages. All downloaded files are saved to the local storage or the microSD card.

1. Tap and hold an image, a link, or a file you want to download.
2. Tap the desired action (**Save image**, **View image**, or **Set as wallpaper**).



# Using Bookmarks

Browser bookmarks are stored shortcuts that allow you to quickly access web pages without typing in their full address.





## 1. Bookmarking a web page

- While viewing web pages, tap  > tap  to save the web page as a bookmark.
- Edit the name or location if needed > tap **OK**.




## 2. Opening a bookmark

- When viewing any web pages, tap  >  **Bookmarks** to open.
- To open the web pages in a new tab, tap and hold the bookmark and select **Open in a new tab**.

## 3. Editing a bookmark

- From any web pages, tap  >  **Bookmarks**.
- Tap on the bookmark that you want to edit.
- Tap  and **Edit**.
- Edit the name and/or location and tap  when done.

## 4. Deleting a bookmark

- From any web pages, tap  >  **Bookmarks**.
- Tap  on the right of the bookmark to delete > tap **Delete**.

# Chrome Settings

Customize your browser settings to optimize your browsing experience.

- From the Home screen, swipe up to reveal all your **Apps** > tap **Chrome**  > tap  >  **Settings**.

# Settings

The instructions below guide you through configuring your device's connections, settings, and features.

## To access settings

- Tap the **Home key**  > swipe up for **Apps** > **Settings** .



## Network & internet

Set up and manage connections to a variety of networks and devices.

### Wi-Fi

You can connect your device to a Wi-Fi network to access the internet without using your mobile data.



#### To enable Wi-Fi

1. Tap **Settings**  > **Network & internet** > **Wi-Fi**.
2. Tap  to turn ON Wi-Fi and scan for available networks.

### Wi-Fi calling

You can make calls over Wi-Fi when connected to a Wi-Fi network.


#### To enable Wi-Fi calling

1. Tap **Settings**  > **Network & internet** > **Wi-Fi calling**.
2. Tap  to enable this feature.
3. Follow the prompts to set up and configure Wi-Fi calling.

## Mobile network

You can configure your device's ability to connect to mobile networks and use mobile data.

### To enable mobile network

1. Tap **Settings**  > **Network & internet** > **Mobile network**.
  - **Automatically select network** - Enable this feature to select the network automatically.
  - **Manual select network** - Allows to choose the network manually from the available list.
  - **Wi-Fi calling** - Allows to make calls over Wi-Fi.
  - **Mobile data** - Activate the mobile network.
  - **Roaming** - Choose whether to allow your device to connect to mobile data while traveling outside the network area.
  - **App data usage** - Check your current mobile and the Wi-Fi data usage.
  - **Data warning & limit** - You can customize data warnings and limits from mobile network.
  - **Access Point Names** - Choose or add APNs, which have the network settings your device needs to connect to.

### View Verizon Account



View Verizon Account is an account management system that lets you view your usage, pay the bills, change your plan, and much more.

## Airplane Mode

The Airplane mode turns off Wi-Fi and Bluetooth and disconnects your device from all networks.

When you are in Airplane mode, you can use other features such as playing music, watching videos, and using offline applications.


### To enable Airplane mode,

1. Tap **Settings**  > **Network & internet** > **Airplane mode**.
2. Tap  to turn the Airplane mode ON/OFF.

## Hotspot & tethering

A mobile hotspot uses your data plan to create a Wi-Fi network that multiple devices can use. You can use tethering to share your device's Internet connection with another device.




To enable the hotspot & tethering option,

1. Tap **Settings**  > **Network & internet** > **Hotspot & tethering**.
2. You can choose any of the following based on the required settings.
  - Mobile Hotspot
  - USB tethering
  - Bluetooth tethering

## Data Saver

Use Data saver to reduce your data consumption by preventing selected apps from sending or receiving data in the background.



### To activate Data Saver,

1. Tap **Settings**  > **Network & internet** > **Data Saver**.
2. Tap  **Use Data Saver** to turn ON the data saver.
  - To allow some apps to have unrestricted data usage, select **Unrestricted data** and tap  next to each app to specify restrictions.

## VPN

A Virtual Private Network (VPN) allows you to connect to a private secured network from your device. You will need the connection information from your VPN administrator.


To connect to VPN

1. Tap **Settings**  > **Network & internet** > **VPN**.
2. Tap  to add a VPN profile.
3. Enter the VPN network information provided by your network administrator, and tap **Save**.

## Private DNS

You can configure your device to connect to a Private DNS host.

### To configure a Private DNS connection

1. Tap **Settings**  > **Network & internet** > **Private DNS**.
2. Choose one of the available options to configure a Private DNS connection.
3. Tap **Save**.

# Connected devices

You can view the list of devices connected through USB and Bluetooth.


## USB

Using this feature, you can charge your device, back up your data to a USB storage device, or restore backup data.

## Pair new device

You can pair your device to other Bluetooth-enabled devices. Once a pairing is created, the devices can remember each other and exchange information without entering the passkey again.


### To pair a new Bluetooth device

1. Tap **Settings**  > **Connected devices**.
2. Tap + **Pair new device**. Make sure the device's Bluetooth is turned ON.
3. Tap a device listed under **Available devices** and follow the prompts to connect.
4. Tap **See all** to view the previously connected devices.

## Connection preferences

You can select the preferred connection type.

### To select the preferred type

1. Tap **Settings**  > **Connected devices** > **Connection preferences**.
  - Bluetooth
  - Cast
  - Printing
  - Files received via Bluetooth



- Chromebook
- Nearby Share
- Android Auto

## Apps

You can manage the device's apps and change their settings. You can view the app's usage information, change its notification or permission settings, or uninstall or disable unnecessary apps.

- Tap **Recently opened apps** to view the list of applications that were recently opened.
- Tap **Default apps** to select one app among multiple apps of the same type as default.
- Tap **Screen time** to set timers for your apps.
- Tap **Application Manager** to open, uninstall, or force-stop the installed applications.
- Tap **Unused apps** to view the applications that are not used frequently.
- Tap **Special app access** to choose the type of access you want for each application.



## Notifications

You can prioritize and streamline app alerts by changing which apps send notifications.

## App Settings

You can configure notifications for every app.



### To enable app notifications

1. Tap **Settings**  > **Notifications** > **App settings** under **Manage**.
2. Tap  beside each application to receive notifications.
3. To view recent and snoozed notifications, tap **Notification history**.

## Notification history

You can view recent and snooze notifications of all the apps listed.

### To view notifications

1. Tap **Settings**  > **Notifications** > **Notification history** under **Manage**.
2. Tap  beside each application to view recent notifications.

## Conversations

The conversations of the notifications set to **Priority** can be seen.



### To view the priority conversations

1. Tap **Settings**  > **Notifications** > **Conversations**

## Bubbles

You can configure the chat bubbles notification for apps.



### To enable chat bubbles

1. Tap **Settings**  > **Notifications** > **Bubbles**.
2. Tap  **Allow apps to show bubbles** to view conversations as floating icons on top of other apps.

## Device & app notifications

You can view and set device and app notifications.


### To set the notifications

1. Tap **Settings**  > **Notifications** > **Device & app notifications** under **Privacy**.
2. Tap the required apps listed and tap  **Allow notification access** to set the **Real-time, Conversations, Notifications**, or **Silent** options for the selected app.

## Notifications on the lock screen

You can choose to view notifications on the screen.



### To set the notification option




1. Tap **Settings**  > **Notifications** > **Notifications on lock screen**.
2. Choose from the following options -
  - Show conversations, default, and silent.
  - Hide silent conversations and notifications.
  - Don't show any notifications.

## Do Not Disturb

You can block sounds and notifications while this mode is turned ON. You can also specify exceptions for People, Apps, and Alarms.

### To activate this mode


1. Tap **Settings**  > **Notifications** > **Do Not Disturb**.
2. Tap **TURN ON/OFF NOW**.
3. Tap **Wireless emergency alerts** to set the threat alerts.
4. Tap  **Hide silent notification** in the status bar to hide the notification alerts displayed in the status bar.

5. Tap  **Allow notification snoozing** to snooze the notification alerts.
6. Tap  **Notification dot on app icon** to view the dot alert on the app icon when there is a notification.
7. Tap  **Enhanced notifications** to get the app's suggested actions, replies, and more.

## Battery

You can view how the Battery power is used for Device activities.



### To view the battery usage details

1. Tap **Settings**  > **Battery**.
  - **Battery Usage** - Displays the usage details.
  - **Battery Saver** - Activate to conserve battery power.
  - **Battery Manager** - Detects when apps drain the battery.
  - **Battery percentage** - Displays the battery charge percentage on the status bar.

## Storage

You can check the status of the used and available memory details.

### To check the status


1. Tap **Settings**  > **Storage**.
2. Tap  **Storage manager** to allow the storage to be managed by the store manager.
3. Tap **Free up space** to manage and free up space by deleting the unused apps. You can also view the list of apps to manage their storage usage.

# Sound

You can configure the sounds and vibrations to indicate notifications, screen taps, and other activities.

## Adjust the volume


You can set the system volume level and default volume for notifications and other media.

1. Tap **Settings**  > **Sound**.
2. Drag the sliders to set the volume for -
  - Media
  - Call
  - Ring & notification
  - Alarm
3. Tap **Phone ringtone** to customize your call ringtone by choosing from preset sounds or adding your own.
4. Tap **Media** to enable the media player to stay open in Quick settings to resume playback quickly.
5. Tap **Vibrate for calls** and choose one of the options to customize -
  - Never vibrate
  - Always vibrate
  - Vibrate first then ring gradually
6. Tap **Default notification sound** to choose a preset sound for all notification alerts.
7. Tap **Default alarm sound** to choose a preset sound for alarms.

8. Tap  **Dial pad tones** to enable tone when dialing numbers on the phone keypad.
9. Tap  **Screen locking sound** to enable a sound when you lock or unlock the screen.
10. Tap  **Charging sounds and vibration** to enable sound and vibrate when a charger is connected.
11. Tap  **Touch sounds** to enable tones when you touch or tap the screen to make selections.
12. Tap  **Touch vibration** to enable vibration when you tap navigation buttons or touch and hold items on the screen.

## Display


You can configure your display's brightness and screen timeout delay.

1. Tap **Settings**  > **Display**.
  - **Brightness level** - Drag the brightness slider to adjust the brightness.
  - **Adaptive brightness** - Tap  automatically adjust the screen brightness based on the lighting conditions.
  - **Lock screen** - Display sensitive content only when the device is unlocked.
  - **Screen timeout** - Choose how long the display screen remains lit after you tap the screen or press any key.
  - **Dark theme** - This allows you to switch to a darker theme to keep your eyes more comfortable at night.
  - **Font size** - This allows you to change the size of the font.
  - **Display size** - This allows you to magnify the content shown on the screen.

- **Night Light** - Enables dimming the screen beyond the minimum brightness setting for more comfortable viewing.
- **Auto-rotate screen** - This allows you to rotate the screen based on the orientation.
- **Screen saver** - Controls what the screen displays when the screen turns off or while charging.


## Wallpaper




You can change the look of your Home and Lock screens with wallpaper. You can display your favorite picture or choose a preloaded wallpaper.

1. Tap **Settings**  > **Wallpaper**.
2. Choose wallpaper from the options:
  - Live Wallpapers
  - Photos
  - Wallpapers

## Accessibility

There are accessibility settings for people who need help seeing, hearing, or operating their devices. Accessibility services are special features that make using the device more accessible.

1. Tap **Settings**  > **Accessibility**.
2. Tap **Select to Speak** to read the text or characters aloud.
3. Tap **TalkBack** to speak feedback aloud. It is helpful to people who are blind or have low vision.

4. Tap **Text and display** to convert speech to text.
  - **Font size** - Configure screen fonts.
  - **Display size** - Magnify the content shown on the screen.
  - **Bold text** - Display the content in bold.
  - **Color correction** - Adjust the color of the screen if you have color blindness or have difficulty reading the screen display.
  - **Color inversion** - Reverse the display of colors.
  - **Remove animations** - Remove certain screen effects if you are sensitive to motion.
  - **Large mouse pointer** - Use a large pointer for a connected mouse.
  - **High contrast text** - Adjust the color and outline of the text to increase the contrast with the background.
5. Tap  **Extra dim** to dim the screen beyond the minimum brightness setting for more comfortable viewing.
6. Tap  **Dark theme** to enable the black background to help keep the battery alive longer on some screens.
7. Tap **Magnification** to magnify the content shown on the screen.
8. Tap **Accessibility Menu** to customize additional accessibility features and services for your device.
9. Tap **Switch Access** to control the devices with customized switches.
10. Tap **Caption preferences** to configure closed caption and subtitle services.
11. Tap **Audio adjustments** to select the options:
  - **Mono Audio:** Tap  to switch audio from stereo to



mono when using one earphone.

- **Audio Balance:** Drag the slider to adjust the volume balance so that sound is louder in the Left or Right speaker, hearing aid, or headphone.

12. Tap **Accessibility shortcuts** to select the options:

- Accessibility button
- Shortcut from lock screen

## Security

Using a screen lock, you can secure your device and protect your data. With this option enabled, you can use your finger to draw a pattern or enter a PIN to unlock your device's screen.

### Google Play Protect

The Google Play Protect monitors your apps and devices for harmful behavior. It also warns you from potentially harmful apps.

#### To run the scan

1. Tap **Security > Security status > Google Play protect**.
2. Tap **scan** to check the apps.

### Find My Device

Find my device helps you locate this device remotely. It also helps you keep your data secure if you lose this device.

#### To use Find My Device

1. Tap **Security > Security status > Find My Device**.
2. Tap  **Use Find My Device** to activate.

**NOTE:** To use this option, you must sign in with Google.

## Security update

You can quickly check the date of the last installed security software update and find out if newer updates are available.

## Screen lock

### To set a screen lock

1. Tap **Security > Screen lock** under **Device security** to select a screen lock and level of security.
  - **None:** Never use a screen lock.
  - **Swipe:** Swipe the screen to unlock.
  - **Pattern:** Create a pattern you draw on the screen to unlock your device.
  - **PIN:** Select a PIN to use for unlocking the screen.
  - **Password:** Create a password for unlocking the screen.

**NOTE:** If you forget your pattern, PIN, or password, you will have to reset your device to factory settings, which will remove all data from your device.

## Smart Lock

Smart Lock keeps your device unlocked when connected to a trusted device or in a familiar location.

## SIM card lock

You can set up a PIN to lock your SIM card, which prevents unauthorized use of it if someone attempts to use on another device.

### To lock the SIM card

1. Tap **Security > SIM card lock**.
2. Tap **Lock SIM card** to turn on the feature.

3. Tap **Change SIM PIN** to create a new PIN.

## Encryption & credentials

You can manage the trusted security certificates installed on your device, which verify the identity of servers for secure connections.


### To manage the settings

1. Tap **Security > Encryption & credentials**.
  - Trusted credentials
  - User credentials
  - Install a certificate
  - Clear credentials

## App Pinning

You can use App pinning to keep one app in view, preventing other users from switching to other apps and accessing your personal information.


### To pin an app

1. Tap **Security > App pinning**.
2. Tap  to turn ON/OFF.

## Privacy

You can use these options to configure advanced security settings to protect your device better.

### To access Privacy




1. Tap **Settings**  **> Privacy**.
2. Tap **Privacy dashboard** to view apps that access sensitive permissions.
3. Tap **Permission manager** to select which permissions you want to be notified about.

4. Tap **Show passwords**  to display characters briefly as you type your passwords for any application.
5. Tap **Notifications on lock screen** to display all the notification content when the screen is locked.
6. Tap **Android System Intelligence** to get suggestions based on the people, apps, and content you interact with. You can also clear the data that your device has learned.
7. Tap **App content**  to allow the applications to send content to the other Android system.
8. Tap **Show clipboard access**  to display the content (text or image) copied to the clipboard.
9. Tap **Autofill service from Google** to fill out forms by injecting data into other apps' views.
10. Tap **Google location history** to view the saved Google locations traveled with your device.
11. Tap **Activity controls** to view the saved activity data on Google sites, including associated info like location and better recommendations.
12. Tap **Ads** to enable/disable personalized Google pop-up Ads on your device
13. Tap **Usage & diagnostics**  to send diagnostic, device, and app usage data to Google. This feature helps in app and system stability, battery life, and other improvements.

## Location

Location services use a combination of GPS, mobile network, and Wi-Fi to determine the location of your device.

## To access location

1. Tap the **Home key**  > swipe up for **Apps** > **Settings**  > **Location**.
2. Tap  **Use location** to turn ON the location.

## App location permissions

You can configure permissions for apps that want to access your location information.

1. Tap **Location** > **App location permissions**.
2. Tap an app and choose which location permissions to grant it.

## Location services




Location services store and use your device's most recent location data. Certain apps can use this data to improve your search results based on your visited places.

1. Tap **Location** > **Location services**.
2. Tap an entry under Location services to see how your location information is used.
  - Emergency Location Service
  - Google Location Accuracy
  - Google Location History
  - Google Location Sharing
  - Wi-Fi scanning
  - Bluetooth scanning

## Safety & emergency

You can set up emergency SOS information.

### To access Safety & emergency

1. Tap **Settings**  > **Safety & emergency**.
2. Tap **Emergency information** to enter your medical information and the emergency phone number.
3. Tap **Emergency SOS** to set up the SOS feature.
  - Tap  **Use Emergency SOS** to enable the feature. Once the SOS feature is enabled, tapping the **Power** button five times in a row will call the emergency services or your chosen contact.
  - Tap  **Play countdown alarm**, if you wish your phone to play an alarm when your Emergency SOS is activated.
  - By default, your device will select your local emergency number. You can change this to one of your contacts. Tap **Call for help** under **Notify for help** to set up emergency calls.
  - Tap **Save**.
4. Tap **Emergency Location Service** to send your service during an emergency.
5. Tap **Wireless emergency alerts** to set the threat alerts.

## Passwords & accounts

You can connect to and manage your accounts, including your Google account, email, and social networking accounts.

### To access passwords & accounts

1. Tap **Settings**  > **Passwords & accounts**.

## Add an Account

You can add and sync all your email, picture, and video sharing accounts.


### To add an account


 
1. Tap **Passwords & accounts** > + **Add account**.
2. Tap one of the account types.
3. Follow the prompts to enter your credentials and set up the account.
4. Tap  **Automatically sync app data** to enable automatic updates to your accounts.

## Digital Wellbeing & Parental Controls

Monitor and manage your digital habits by getting a daily view of how often you use apps, how many notifications you receive, and how often you check your device. You can also set your device so that it helps you relax before you sleep.

### To access Digital Wellbeing & Parental Controls


1. Tap **Settings**  > **Digital Wellbeing & Parental Controls**.
2. Tap **Dashboard** to view screen time for each app that has been used each day.
3. Tap **Bedtime mode** to select the options:
  - **Do Not Disturb for Bedtime mode:** This option allows calls only from starred contacts, repeat callers, and alarms.
  - **Grayscale:** Enable this option to change the screen to black and white.
4. Tap **Focus mode** to set focus time for each app.
5. Tap **Manage notifications** to configure and manage notifications from apps and services.

6. Tap **Do Not Disturb** and enable this option to get notifications only by starred contacts and apps.
7. Tap **Heads Up** to set a reminder to focus on what's around you if you are walking while using your device.
8. Tap the **Show icon in the app list**  to display the Digital Wellbeing app icon in the app list.
9. Tap **Parental Controls** to monitor your children's digital life with **Google's Family Link** app. The app can be downloaded from the **Play store**  and allows you set content filters, watch screen time, and set screen time limits.

## Google

You can configure your device's Google settings.

### To access google settings

1. Tap **Settings**  > **Google**.
2. Choose the desired settings and preferences.
  - Ads
  - Autofill
  - Backup
  - Devices & sharing
  - Find My Device
  - Mobile data & messaging
  - Parental controls
  - Personalize using shared data
  - Set up & restore
  - Settings for Google apps
3. Tap **Firebase App Indexing** to capture user actions and errors for a particular app.



# System

You can customize the system settings and preferences.

## To access system

1. Tap **Settings**  > **System**.

## Languages & input

Configure your device's language and input settings.

1. Tap **System** > **Languages & input** > **Languages**.
2. Select the desired language from the list to set it as default.
3. Tap the **On-screen keyboard** under **Keyboards** > select the desired keyboard from the list.
4. Tap **Spell-checker** under **Tools** to enable the spell-checking feature.
5. Tap **Personal dictionary** under **Tools** to add new words for apps such as Spell checker.
6. Tap **Pointer speed** under **Tools** to set the speed of the pointer.
7. Tap **Text-to-speech** output under **Tools** to customize the options.
  - **Speech rate** - Set the speed at which the text is spoken.
  - **Pitch** - Set the tone at which the text is spoken.

## Gestures

You can hide the navigation buttons at the bottom of the screen for an unobstructed screen experience. Instead, swipe to navigate your device.

1. Tap **System > Gestures**.
2. Tap **Quickly open camera** to open the camera by pressing the **Power** button twice. This works from any screen.
3. Tap **System Navigation** to choose any of the options:
  - Gesture navigation
  - 3-button navigation

## Date & time

Date and time information is automatically captured by your device when connected to the wireless network by default.

You may want to manually change the date and time information outside the network coverage using the date and time settings.

1. Tap **System > Date & time**.
2. Tap  **Set time automatically**. The Date and Time are set automatically and greyed out. If this option is disabled, you must set the **Date** and **Time** manually.
3. Tap  **Set time zone automatically** under Time zone to set the time
4. Tap  **Use location to set time zone** under Time zone.
5. Tap  **Use locale default under Time format** to select the default time format to display.
6. Tap  **Use 24-hour format under Time format** to display in the 24-hour format.



## Backup

You can back up your data to Google servers.

1. Tap **System > Backup**.
2. Select a Google account to be used as your backup account.

## Multiple users

You can share your device by adding new users, and each user will have a personal space on your device, Home screens, accounts, apps, settings, and much more.

1. Tap **System > Multiple users**.
2. Tap **Use Multiple users**  to enable this option.
3. Tap **+ Add user** to add a new user to the device. When a new user is added, that user must set up their space.
4. Tap **Add users from lock screen**  to create new users even when the device is locked.

## Reset options


You can reset your device to its factory defaults.

1. Tap **System > Reset options**.
2. Choose the desired options.
  - Reset Wi-Fi, mobile & Bluetooth
  - Reset app preferences
  - Erase all data (factory reset)
  - Reset Settings

## System updates

Software updates are automatically sent to your device. You will receive an alert whenever a new update is available.

### To view the software update details

1. Tap **Settings**  **> System updates**.
  - **Check for new system update** - Manually check for software updates.
  - **Show system update history** - View a list of all

software updates on your device.


- **Use software upgrade assistant** - Install a tool to install system updates.
- **Smart updates** - Install security updates automatically.
- **System updates status** - Displays the status of the update.
- No updates applied.

## NOTE:

- Back up all your information before the software update.
- Make sure the device is powered ON with a fully charged battery.
- Never turn OFF the device during the software update.
- During the updating period, the device will reboot twice. Do not operate the device until the update is complete.

## About Phone

You can view information about your device, including current status, legal information, hardware and software versions, and more.

1. Tap **Settings**  > **About phone**.
2. You can see the following device details:
  - Device name
  - Phone number
  - Legal information
  - SIM status
  - Model
  - FCC ID
  - IMEI

- Android version
- IP address
- Wi-Fi MAC address
- Device Wi-Fi MAC address
- Bluetooth address
- Uptime
- Last factory data reset
- Build number

## COVID-19 Exposure Notifications

This notification feature helps you to understand whether you have been exposed to someone who reports having COVID-19.

To get notified, you need to either download an official app from your region's government public health authority or, if supported in your region, enable it directly in your device **Settings**.

- If you have COVID-19, you may share that info in **Exposure Notifications** to help alert the people you have been in contact with.
- If you have been exposed to someone who has shared they have COVID-19, you may be notified and provided with further instructions.

# Product Specifications

<b>Display</b>	<b>6.088" HD+</b> 1560x720, Scratch Resistant Glass
<b>Camera</b>	<b>Front: 5MP</b> <b>Rear: 8MP</b>
<b>Memory</b>	3/32 GB
<b>Operating System</b>	<b>Android™ S</b>
<b>Connectivity</b>	<b>Wi-Fi:</b> IEEE 802.11 ac/b/g/n/a 2.4/5GHz <b>Bluetooth:</b> 5.0
<b>Sensors</b>	<b>ALS Sensor, G Sensor</b> FP, Light and proximity sensor, Barometer
<b>Battery</b>	<b>3400 mAh</b> Non-Removable

# Safety Hazards

Do not operate the Phone in an environment that might be susceptible to radio interference resulting in danger.

## FCC Statement

This device with **FCC ID: 2ABGH-RC608L** complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device under Part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF. In that case, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **FCC SAR Warning**

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate or SAR. Tests for SAR are conducted using standard operating positions (10mm) accepted by the FCC, with the device transmitting at its highest certified power level in all tested frequency bands. The SAR limit set by the FCC is **1.6W/kg**.

### **FOR COUNTRY-CODE SELECTION USAGE (WLAN DEVICES)**

**NOTE:** The country code selection is for non-US models and unavailable to all US models. Per FCC regulation, all Wi-Fi products marketed in the US must be fixed to US operation channels only.



## HAC Statement

This device is compliant with the FCC Hearing Aid Compatibility requirements.

The ANSI standard for hearing aid compatibility contains two types of ratings:

- M-Ratings: Rating for less radio frequency interference to enable acoustic coupling with hearing aids.
- T-Ratings: Rating for inductive coupling with hearing aids in telecoil mode.

A phone is considered hearing aid compatible under FCC rules if it is rated M3 or M4 for acoustic coupling and T3 or T4 for inductive coupling. These ratings are given on a scale from one to four, where four is the most compatible. Not all phones have been rated.

# Battery Use

Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of removable batteries and, particularly, from the continued use of damaged batteries.

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire explosion or other hazards.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Using an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazards.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Using an unqualified battery may present a risk of fire, explosion, leakage, or other hazards.
- Only authorized service providers shall replace the battery. (If the battery is non-user-replaceable).
- Promptly dispose of used batteries under local regulations.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazards.
- The recommended charging and discharging temperature range of the devices is 0-49°C.

# Troubleshooting

Here are a few things you can try before contacting the service center.

## **Your device displays network or service error messages.**

You may lose reception when you are in areas with weak signals or poor reception. Move to another area and try again.

## **Your device does not turn ON.**

When the battery is completely discharged, your device will not turn on. Charge the battery fully before turning on the device.

## **The touchscreen responds slowly or improperly.**

- If you attach a screen protector or optional accessories to the touchscreen, it may not function properly.
- If you are wearing gloves, if your hands are not clean while touching the touchscreen, or if you tap the screen with sharp objects or your fingertips, the touchscreen may malfunction.
- The touchscreen may malfunction in humid conditions or when exposed to water.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is updated to the latest version.

## **Your device freezes or encounters a fatal error.**

1. Restarting the device
  - If your device freezes or hangs, you may need to close apps or turn OFF the device and turn it ON again.
2. Forcing restart
  - If your device is frozen and unresponsive, press and hold the **Power/Lock** key to restart the device.

### 3. Resetting the device

- If the methods above do not solve your problem, perform a factory data reset.

#### **Calls are not connected.**

- Ensure you have accessed the right network.
- Ensure you have not set call barring for the phone number you dial.
- Ensure that you have not set call barring for the incoming phone number.

#### **Your device cannot find your current location.**

GPS signals may be obstructed in some locations, such as indoors. Set the device to use Wi-Fi or a mobile network to find your current location in these situations.